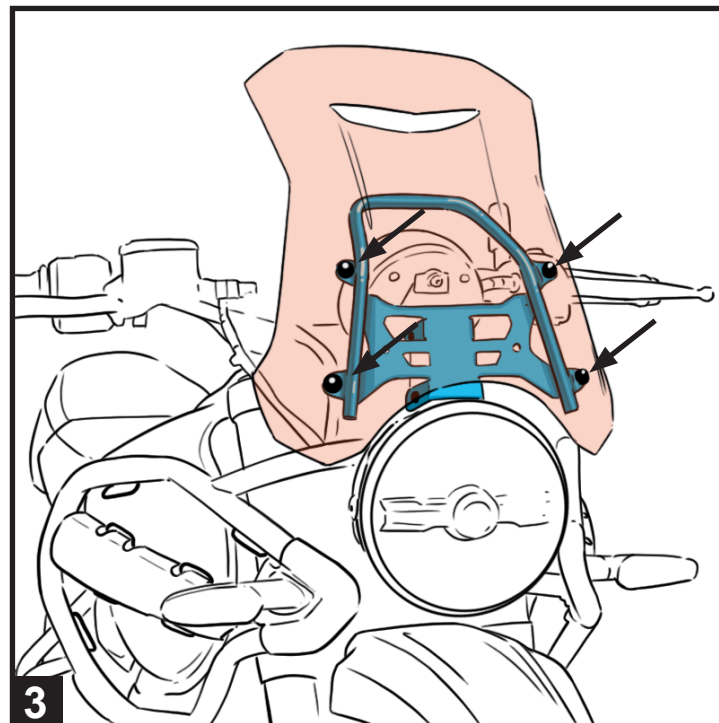
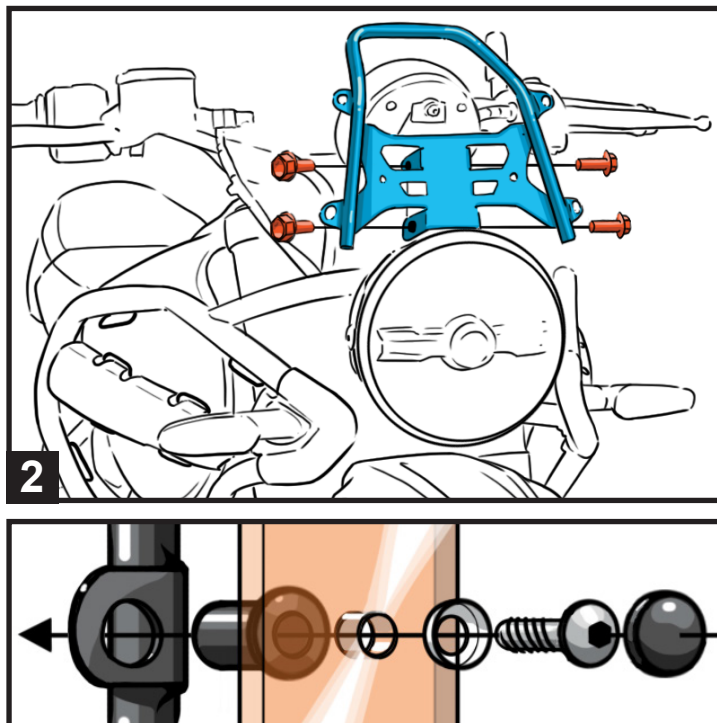
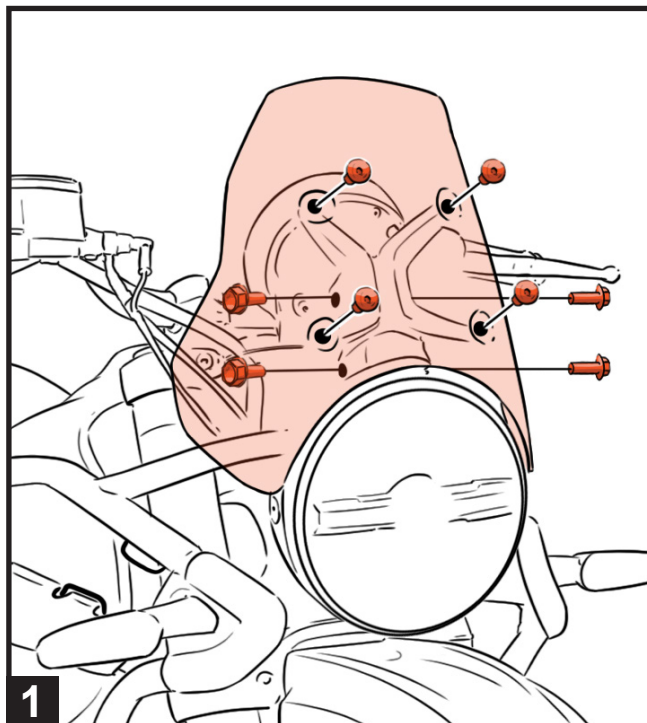


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.**EN**_Remove the four screws securing the original windshield to its support.

Remove the four side screws that attach the original support to the motorcycle.

Position the new frame on the motorcycle and secure it using the original screws.

To mount the windshield onto the tubular support, use the four Wellnuts following the indicated diagram.

IT_Rimuovere le 4 viti che reggono il cupolino originale al supporto.

Rimuovere le 4 viti laterali che fissano il supporto originale alla moto.

Posizionare il telaio sulla moto e riutilizzare le viti originali per fissarlo alla moto.

Per il fissaggio del cupolino sul supporto in tubo usare i 4 Wellnuts seguendo lo schema indicato.

